


## 01-416 Cylinder head measuring sensor box

### Note


The measuring sensor box must be equipped to agree with the engine version.

Note screwed depth and use seals of sufficient thickness.

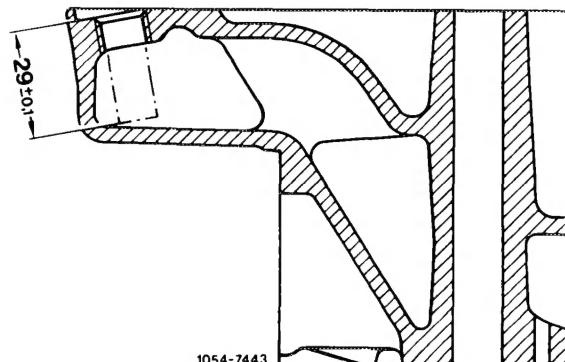


Measuring sensor box for **carburator engine with air conditioner**

- 2 100°C temperature switch and adaptor for extra fan/air conditioner
- 3 Core plug M 22 x 1.5
- 4 Plug M 14 x 1.5
- 5 Coolant temperature gage sensor
- 6 Core plug M 22 x 1.5

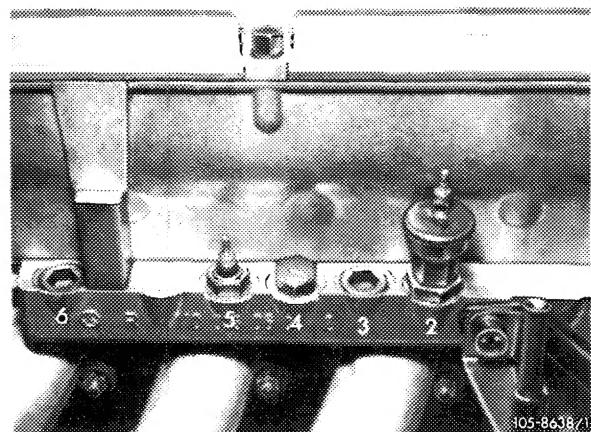


Measuring sensor box for **fuel injection engine with air conditioner**

- 1 Coolant temperature sensor for control unit
- 2 100°C temperature switch and adaptor M 18 x 1.5 for extra fan/air conditioner
- 3 Core plug M 22 x 1.5
- 4 Temperature timing switch for cold starts
- 5 Coolant temperature gage sensor
- 6 Core plug M 22 x 1.5

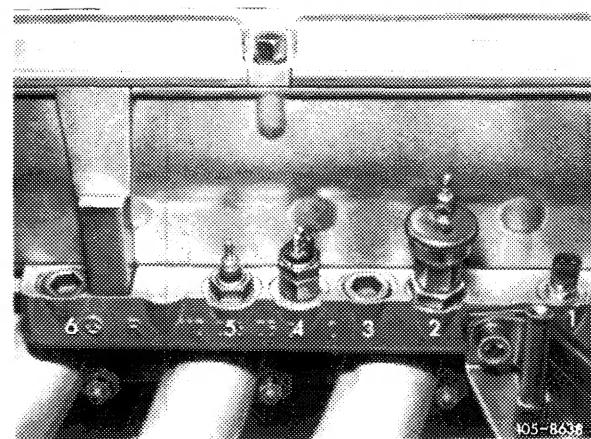

## Measuring sensor box for **continuous fuel injection engine** with **air conditioner**

- 2 100°C temperature switch and adaptor M 18 x 1.5 for extra fan/air conditioner
- 3 Core plug M 22 x 1.5
- 4 Temperature timing switch for cold starts
- 5 Coolant temperature gage sensor
- 7 Core plug M 22 x 1.5

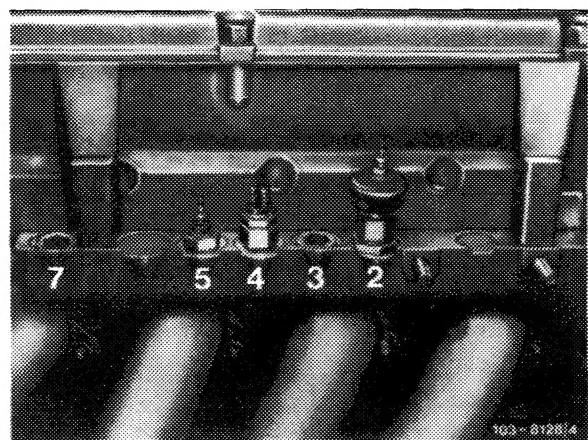

## Measuring sensor box for carburetor engine USA with air conditioner

- 2 100°C temperature switch and adaptor M 18 x 1.5 for extra fan/air conditioner and exhaust gas recirculation
- 3 Core plug M 22 x 1.5
- 4 65°C temperature switch (exhaust gas recirculation)
- 5 Coolant temperature gage sensor
- 6 Core plug M 22 x 1.5

